



# TriCaster® Mini 4K: Quick Start Guide



 
## What's in the box?



TriCaster® Mini 4K



2 Viz Connect Solo and Network Cables



Removable Power Cable



Keyboard & Mouse



1 Mini DisplayPort Adapters




Cable Management Clamp



Power Supply



## TriCaster Mini 4K Connections Set-Up – Front Panel

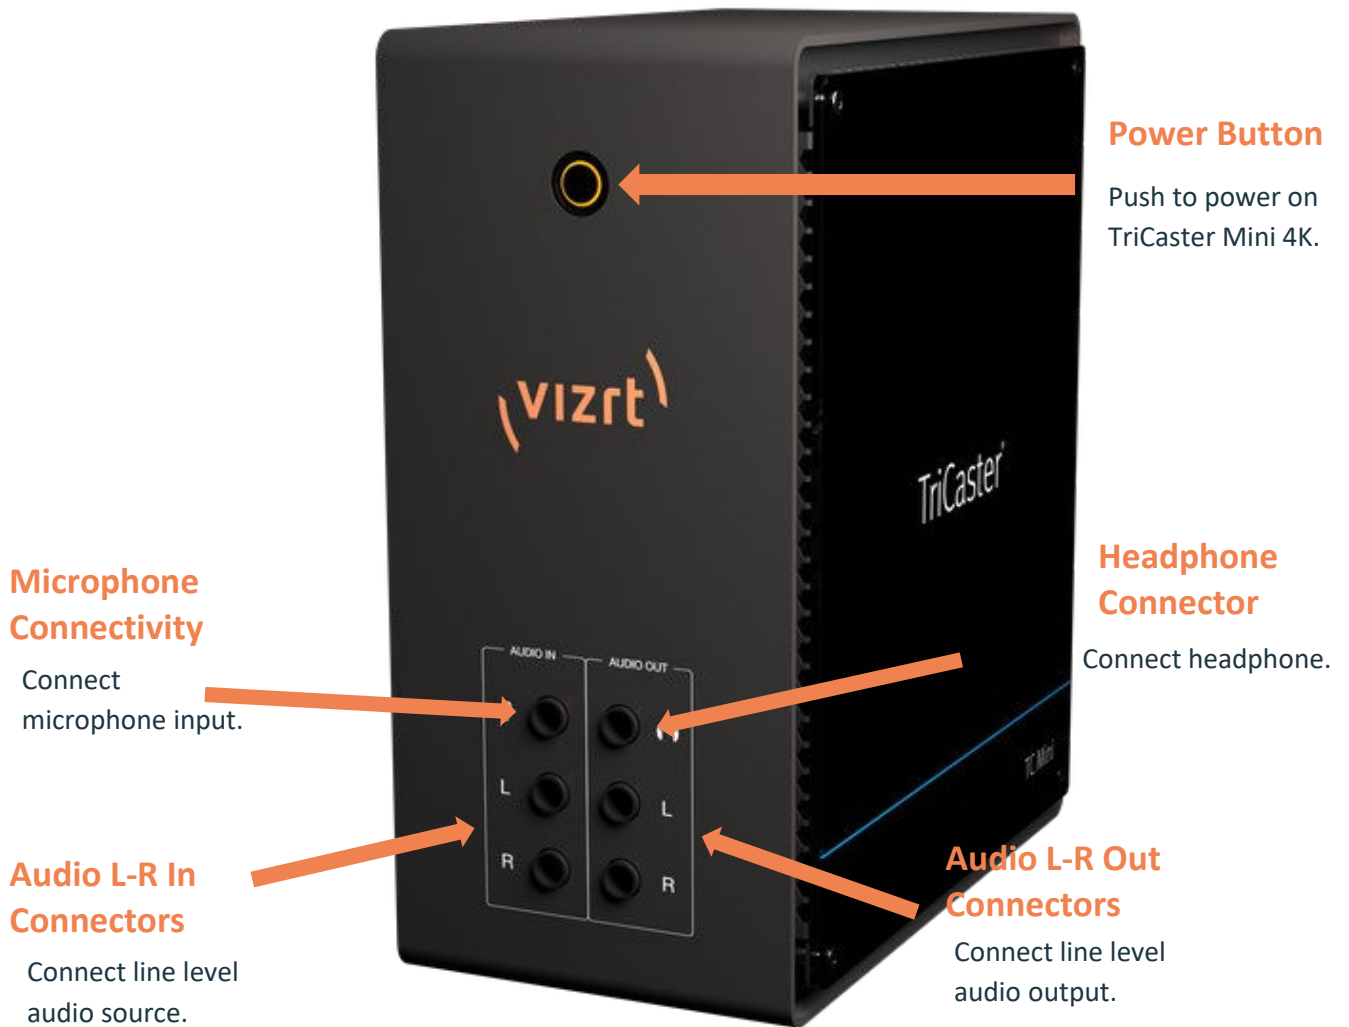




## TriCaster Mini 4K Connections Set-Up – Back Panel

### USB 3 Connectors

- Connect Keyboard & Mouse
- If USB extenders are needed for peripheral devices, performance can vary and it is recommended to contact an authorized Vizrt supplier for advice.

### Gigabit Ethernet Network Connectors

- Connect to network for more input sources, for output and internet access.

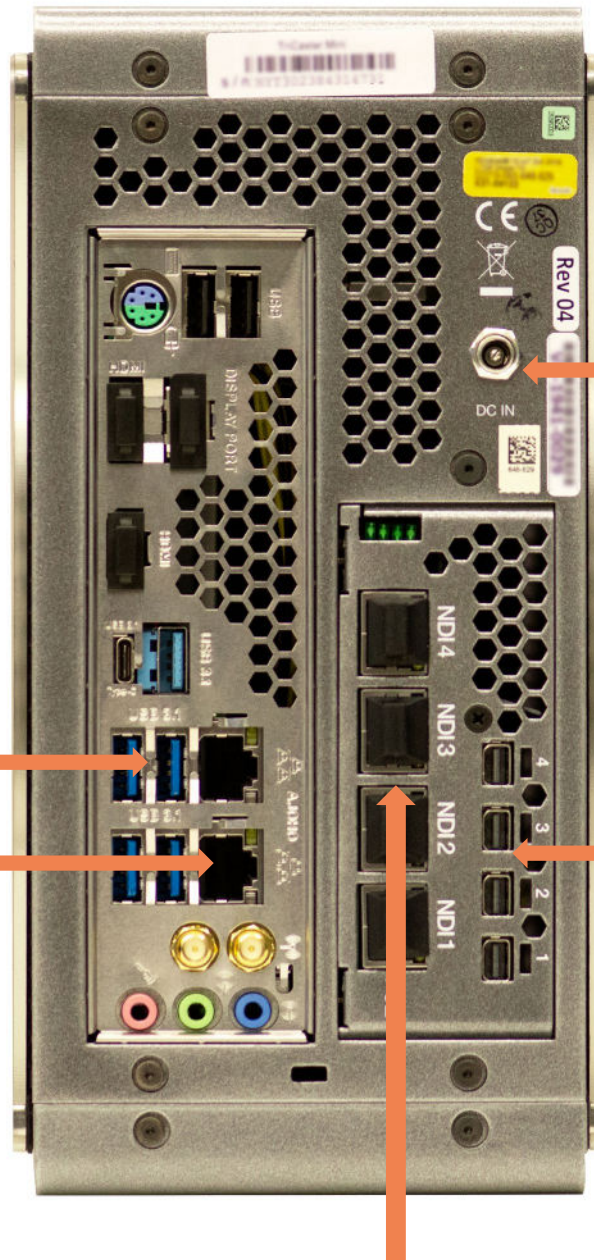

### Power Connector

- Connect the removable power cord to the power supply.
- Connect the power supply cable to the power connector on TriCaster Mini 4K.
- Plug in the removable power cable into electrical source.

### Mini Display Port Connectors

- Connect Mini Display Port to DisplayPort or HDMI adapters.
- Connect adapter cables to HDMI or DisplayPort monitors and displays.

### NDI Source Connectors

- Connect network cables to NDI® connector on the Viz Connect Solo or other NDI Sources.



## TriCaster Mini 4K - Registration

### 1. Serial Number Label

Find the 15-character serial number label on the TC Mini unit.



### 2. Internet Connection

Use one of the Gigabit Ethernet Network Connectors on the unit to make an active Internet connection.

### 3. Display, Keyboard & Mouse


Be sure a display, keyboard and mouse are connected to the unit.

### 4. Power

Press the Power switch on the unit.


### 5. End User License Agreement

Once the unit finishes powering up the End User License Agreement screen appears. Click on I Accept the license conditions to continue.

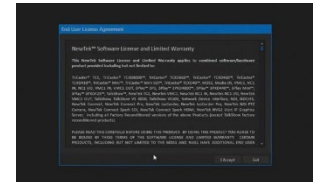


### 6. User Information

The user info screen now appears. Fill out the information and when complete, click OK.

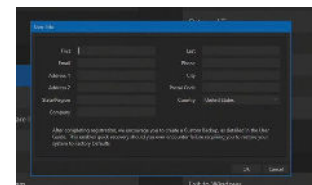

### 7. TriCaster® Registration

The Register TriCaster® screen now appears. Type in the 15-character serial number and then click continue.

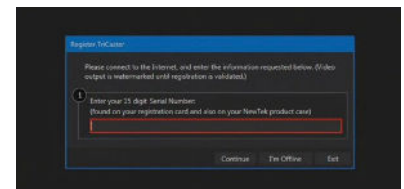

### 8. Software Update

After confirmation with the registration service, the system user interface appears. Before using the system, please go to <https://www.vizrt.com/support/product-updates/> to download and install the latest version of software.